

Seat Ventilation with Heated Seats , (4D3),(4D8),(Q2J)


From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Left Front Seat Temperature Sensor, Memory Seat/
Steering Column Adjustment Control Module, Driver Seat
Heating Element, Driver Backrest Heating Element

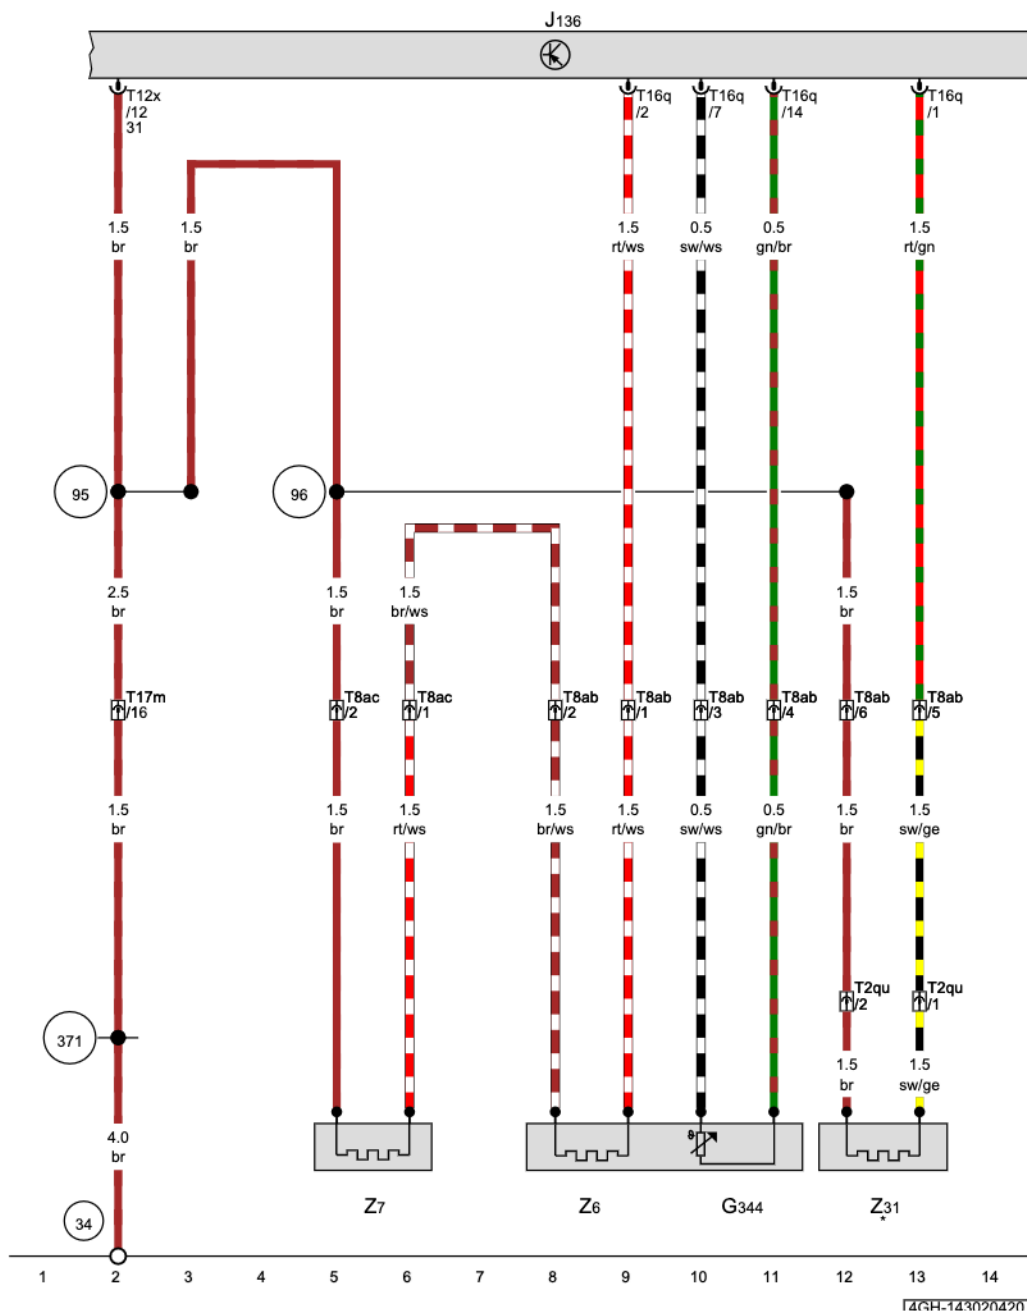


- G344 Left Front Seat Temperature Sensor
- J136 Memory Seat/Steering Column Adjustment Control Module
- T2qu 2-Pin Connector, Black
- T8ab 8-Pin Connector, In the Driver Seat, Brown
- T8ac 8-Pin Connector, In the Driver Seat, Black
- T12x 12-Pin Connector
- T16q 16-Pin Connector
- T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
- Z6 Driver Seat Heating Element
- Z7 Driver Backrest Heating Element
- Z31 Driver Seat Bolster Heater

- 34 Ground Connection Under Driver Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)

* Pre-Wired Component


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

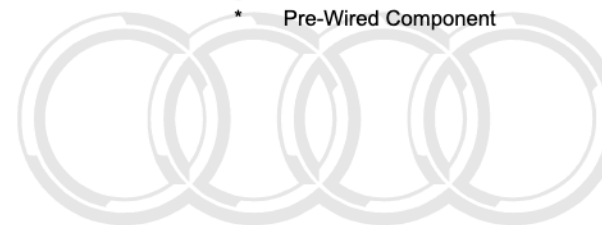

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without express authorisation by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

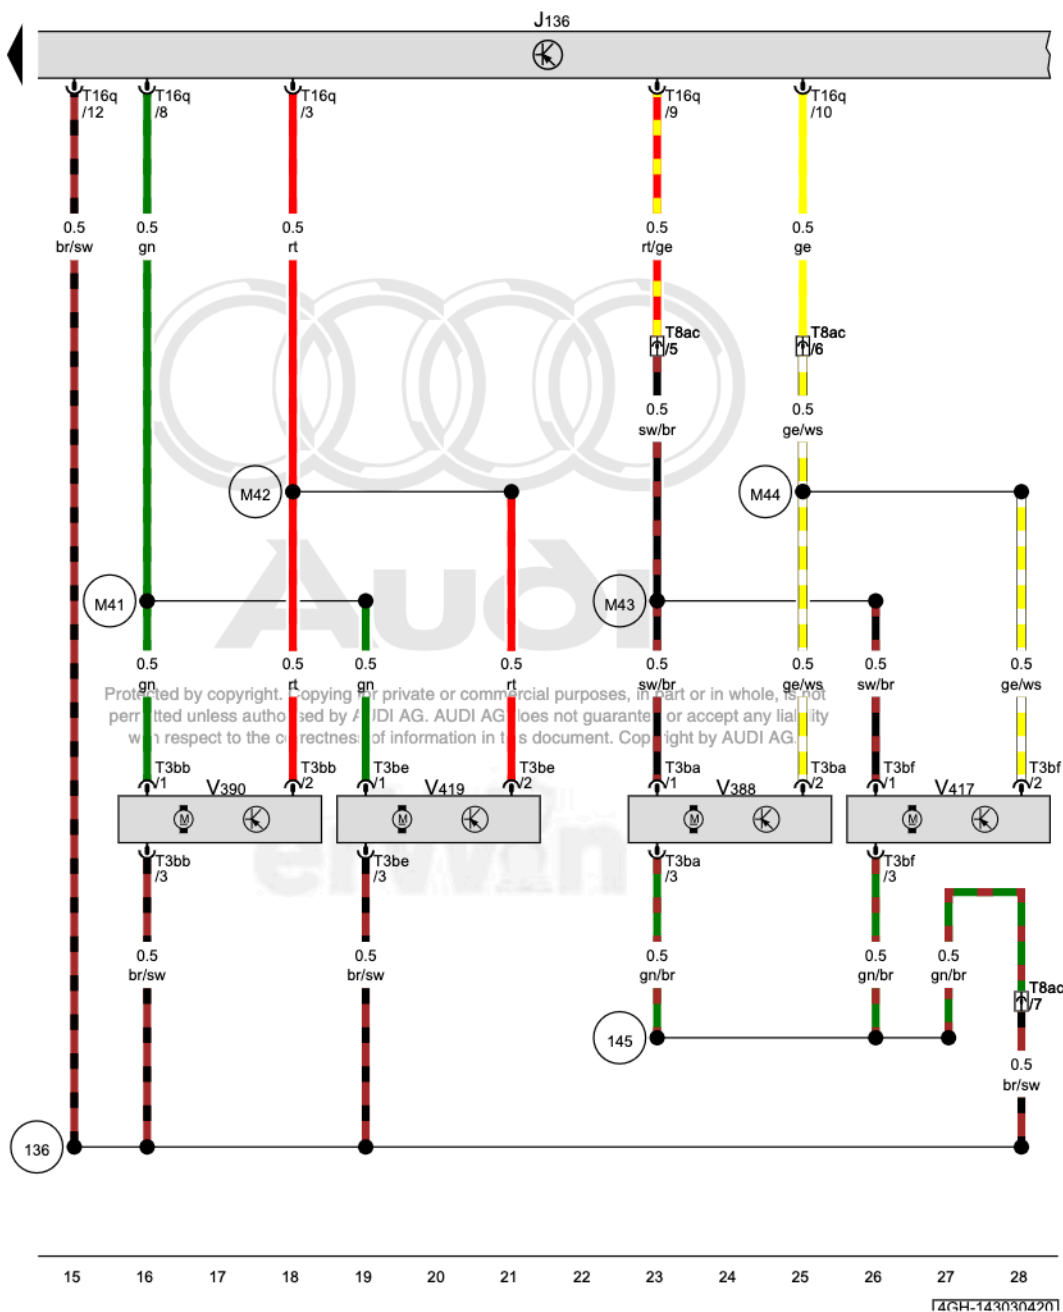

Memory Seat/Steering Column Adjustment Control Module, Driver Seat Backrest Blower Fan, Driver Seat Cushion Blower Fan

- J136 Memory Seat/Steering Column Adjustment Control Module
- T3ba 3-Pin Connector
- T3bb 3-Pin Connector
- T3be 3-Pin Connector
- T3bf 3-Pin Connector
- T8ac 8-Pin Connector, In the Driver Seat, Black
- T16q 16-Pin Connector
- V388 Driver Seat Backrest Blower Fan
- V390 Driver Seat Cushion Blower Fan
- V417 Driver Seat Backrest Blower Fan 2
- V419 Driver Seat Cushion Blower Fan 2

- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- 145 Ground Connection 3 (in Heated Seats Wiring Harness)
- M41 Connection 1 (in Driver Seat Wiring Harness)
- M42 Connection 2 (in Driver Seat Wiring Harness)
- M43 Connection 3 (in Driver Seat Wiring Harness)
- M44 Connection 4 (in Driver Seat Wiring Harness)

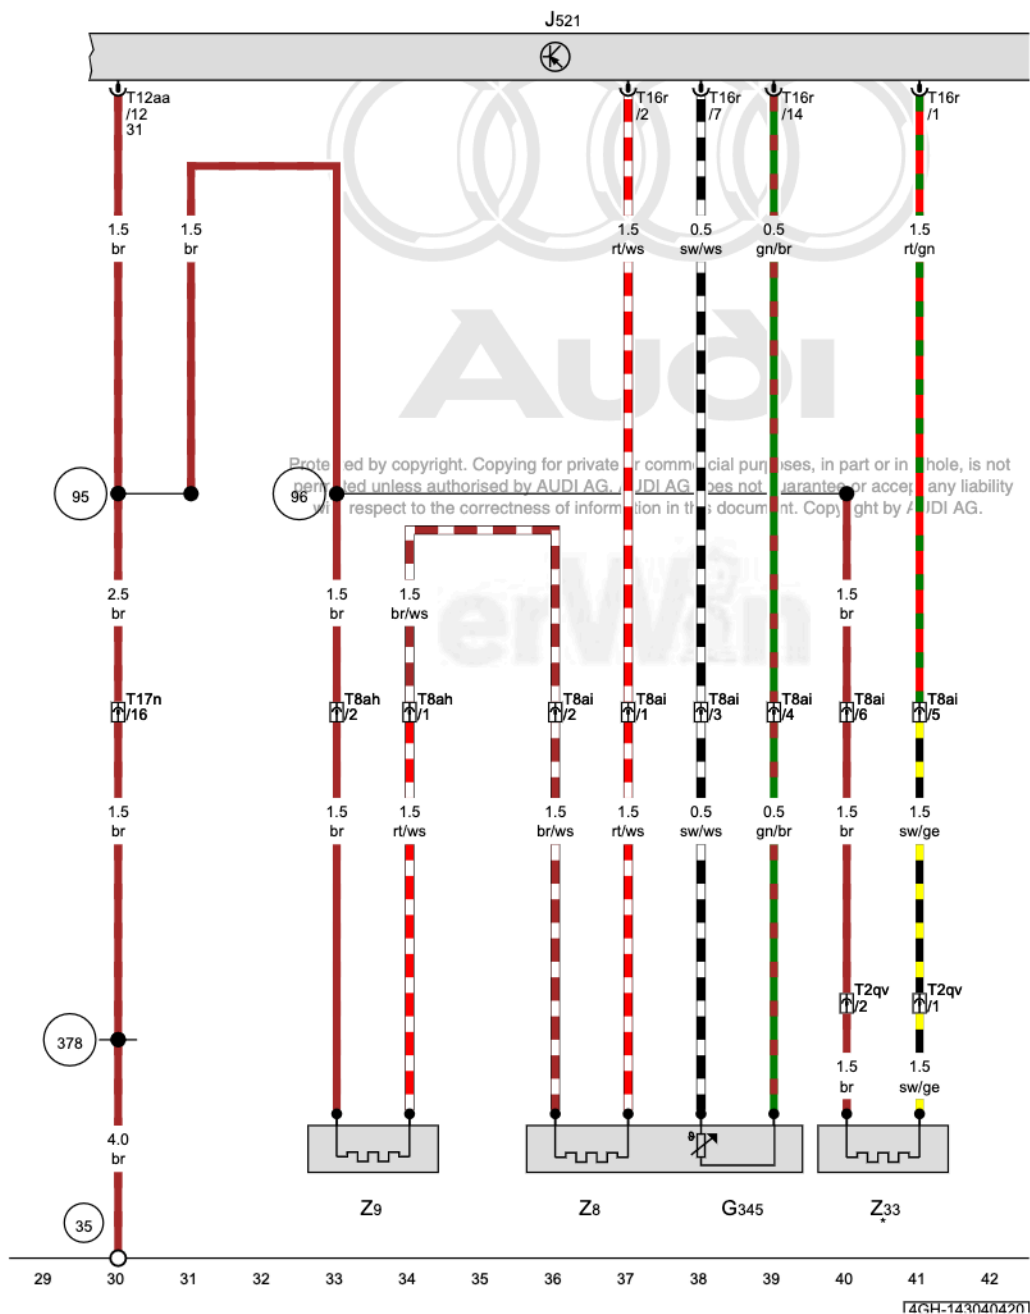


Right Front Seat Temperature Sensor, Front Passenger Memory Seat Control Module, Front Passenger Seat Heating Element, Front Passenger Backrest Heating Element

- G345 Right Front Seat Temperature Sensor
- J521 Front Passenger Memory Seat Control Module
- T2qv 2-Pin Connector, Black
- T8ah 8-Pin Connector, In the Front Passenger Seat, Black
- T8ai 8-Pin Connector, In the Front Passenger Seat, Brown
- T12aa 12-Pin Connector
- T16r 16-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- Z8 Front Passenger Seat Heating Element
- Z9 Front Passenger Backrest Heating Element
- Z33 Front Passenger Seat Bolster Heater

- 35 Ground Connection Under Front Passenger Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 96 Ground Connection 1 (in Heated Seats Wiring Harness)
- 378 Ground Connection 13 (in Main Wiring Harness)

* Pre-Wired Component

Front Passenger Memory Seat Control Module, Front Passenger Seat Backrest Blower Fan, Front Passenger Seat Cushion Blower Fan

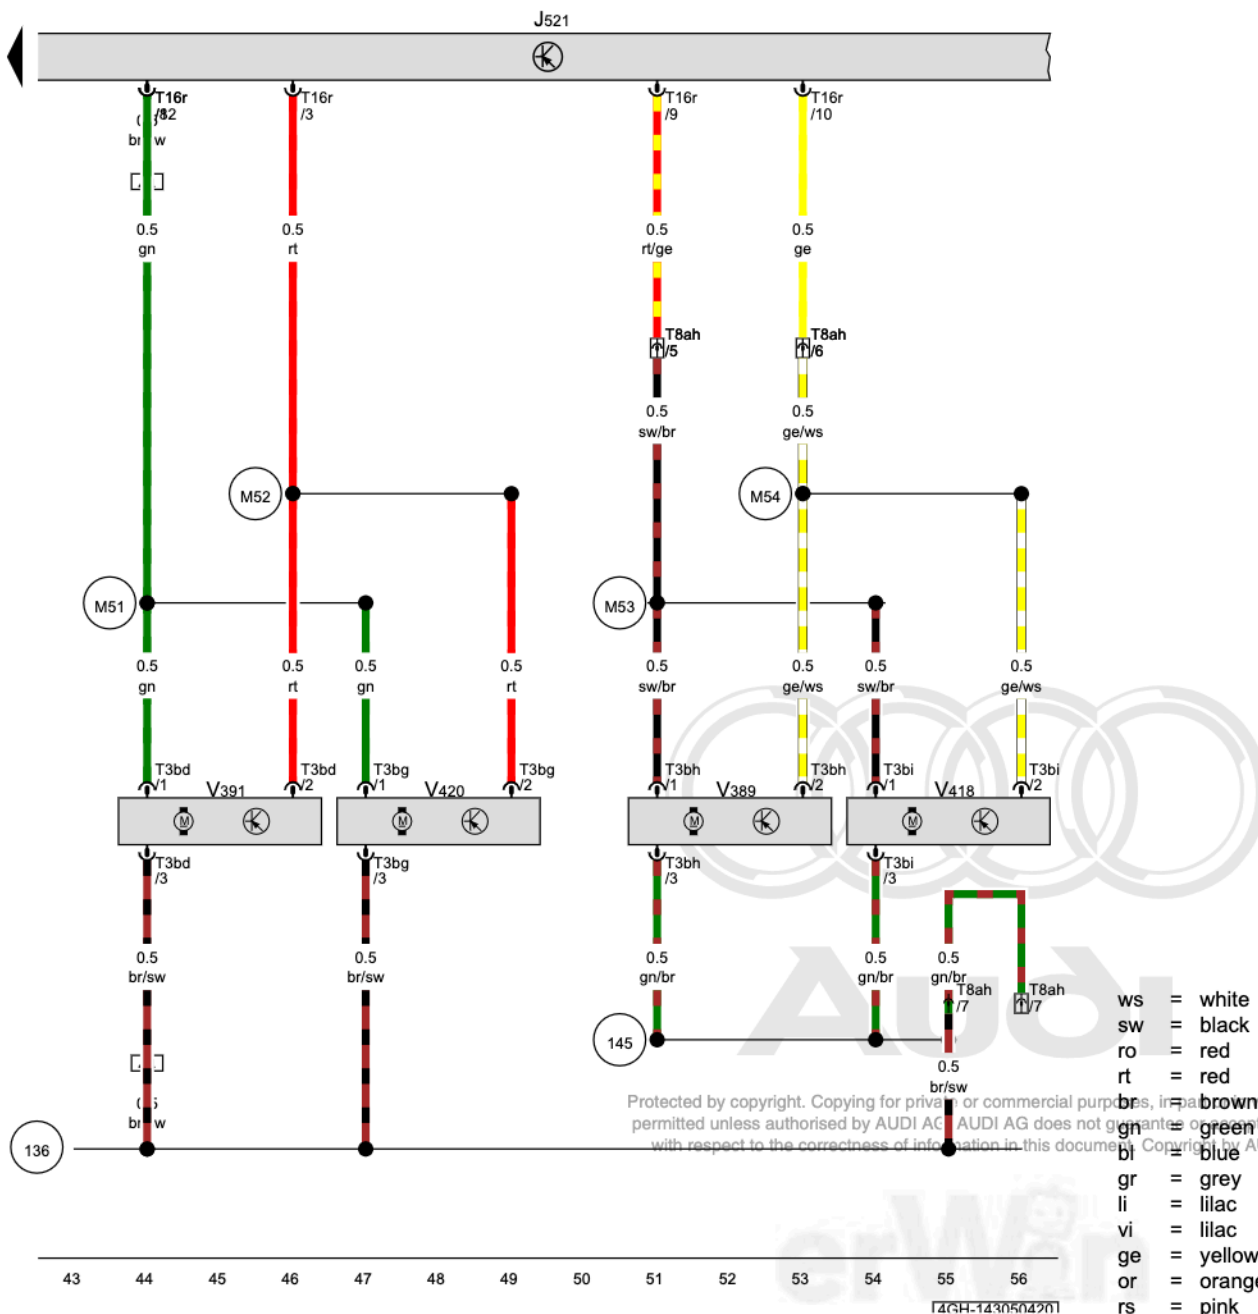

- J521 Front Passenger Memory Seat Control Module
- T3bd 3-Pin Connector
- T3bg 3-Pin Connector
- T3bh 3-Pin Connector
- T3bi 3-Pin Connector
- T8ah 8-Pin Connector, In the Front Passenger Seat, Black
- T16r 16-Pin Connector
- V389 Front Passenger Seat Backrest Blower Fan
- V391 Front Passenger Seat Cushion Blower Fan
- V418 Front Passenger Seat Backrest Blower Fan 2
- V420 Front Passenger Seat Cushion Blower Fan 2
- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- 145 Ground Connection 3 (in Heated Seats Wiring Harness)
- M51 Connection 1 (in Front Passenger Seat Wiring Harness)
- M52 Connection 2 (in Front Passenger Seat Wiring Harness)
- M53 Connection 3 (in Front Passenger Seat Wiring Harness)
- M54 Connection 4 (in Front Passenger Seat Wiring Harness)